

TRULY Cheat Sheet



? Set and Read key.

◆ Displays function menus, selects and saves changes.

◀ ▶ Moves the cursor left and right.

Turn Pager On:

Press ◆, POWER ON? will display, press ? to confirm.

Read Messages:

Press ? to stop alert and to display message. Press ? again to scroll through entire message.

To read messages received previously, press ? then press ◀ or ▶ to select and ? to read the message. Stores up to 33 messages.

Delete message:

While message is displayed press ◆ to display icons Press ◀ once (cursor will be over sheet of paper with line through it) Press ? "DELETE?" will display on screen Press ?

Delete all messages:

While message is displayed press ◆ to display icons, Press ◀ twice (cursor will be over 3 sheets of paper with line through it) Press ? "DELETE ALL?" will display on screen. Press ?

Set time & date:

Press ◆ until 2 rows of icons are displayed on screen. Press ▶ right arrow 6 times to reach icon in top right corner. Press ? , 3 icons will appear. Press ▶ twice to move cursor to calendar icon then press ? . This allows you to format the date display, (m,d,y) is commonly used. Press ? to accept changes. Press ◆ again until 2 rows of icons are displayed. Press ▶ 6 times to reach icon in top right corner. Press ? , 3 icons will appear. Press ? to choose clock icon. Use ◀ or ▶ to change settings. Press ? to move to the next setting. Press ? to accept all changes when done.

Change alert:

Press ◆, until 2 rows of icons are displayed on screen. Press ▶ 5 times to highlight loudspeaker icon. Press ? Private alert will display on screen *This is the setting that will receive all pages sent to this pager. Public alert only applies to the pagers that have news and information updates programmed into them* 3 icons will display at bottom of screen the first is beep/music alert, second is vibrate, third is silent Move cursor to alert of choice *If first alert is chosen, there are 23 different setting of beep/music to choose from* Press ? Setting automatically advances to Public alert, if pager is not programmed for these service, Press ? 3 times.

Zoom to 2-line screen:

Press ◆, to display icons on screen. Press ◀ 4 times to highlight (AA) icon. Press ? . Press ◀ once to highlight capital A. Press ? .

TO ESCAPE FROM ANY ICON SCREEN WITHOUT MAKING ANY CHANGES PRESS ◆

DO NOT USE "key" ICON TO SET PASSWORD. ONCE A PASSWORD IS SET MESSAGES CANNOT BE ACCESSED WITHOUT IT.